

## Cold Spark Machine DMX User Guide

512 Channel	Value	Function
CH 1	0 – 10	Stop Running
	11 – 179	Emergency Stop
	180 – 199	Clear Material
	200 – 219	Protocol Switching
	220 – 239	Wireless Machine
	240 – 255	Operation
CH 2	0 – 255	Density Control Increment
CH 3	0 – 255	Height Control Increment

### To Set DMX Address

- Press the '+' button until you get 'P1'
- Press and hold the '+' button for a few seconds which will change the display the dmX address.
- Use the '+' and '-' buttons to change the dmX address
- Once the required number is achieved hold the '+' button for a few seconds which will save and exit the dmX address section

### Additional Notes

- Please run the cleaning Cycle at the end of every Day